

This is compatible with the folowing TV models:

FEFS24A6A  
FEHS32D7A  
FEHFS39D8A

## DIRECT TV

Direct TV Remote Part Number: RC65



### SEARCHING FOR TV, AV1 OR AV2 CODES

If you were unable to find the code for your brand of TV or component, you can try a code search. This process may take up to 30 minutes.

1. Turn on the TV or component. Insert a tape or disk if applicable.
2. Slide the **MODE** switch to the **TV AV1** or **AV2** position, as desired.
3. Press and hold the **MUTE** and **SELECT** keys at the same time until the green light under the selected switch position flashes twice, then release both keys.
4. Enter **9-9-1** followed by one of the following four-digits:

COMPONENT TYPE	COMPONENT ID #
Satellite	0
TV	1
VCR/DVD/PVR	2
Stereo	3

5. Press **PWR**, or other functions (e.g. **PLAY** for VCR) you want to use.
6. Point the remote at the TV or component and press **CHAN▲**. Repeatedly press **CHAN▲** until the TV or component turns off or performs the action you selected in step 5.

**NOTE:** Every time **CHAN▲** is pressed the remote advances to the next code and power is transmitted to the component.

7. Use the **CHAN▼** key to step back a code.
8. When the TV or component turns off turns off or performs the action you selected in step 5, stop pressing the **CHAN▲** key. Then, press and release the **SELECT** key.

**NOTE:** If the light flashes 3 times before the TV or component responds, you've cycled through all codes and the code you need is not available. You must use the remote that came with your TV or component.

### Verifying the Codes

Once you have set up the DIRECTV® Universal Remote Control using the above steps, use the following instructions to find out the 5-digit code to which your component responded:

1. Slide the **MODE** switch to the appropriate position.
2. Press and hold the **MUTE** and **SELECT** keys at the same time until the green light under the selected switch position flashes twice, then release both keys.
3. Enter **9-9-0**. (The green light under the selected switch position flashes twice.)
4. To view the first digit in the code, Press and release the number 1 key. Wait three seconds, and count the number of times the green light flashes. Write this number down in the leftmost TV, AV1 or AV2 code box found on page 10.
5. Repeat step 4 four more times for the remaining digits; i.e., press number 2 for the second digit, 3 for the third digit, 4 for the fourth digit and 5 for the final digit.

## DISH NETWORK

Dish Network Remote Part Number: 21.1

Remote Code for TV is 550



### Programming Remote to Control Another Device

#### Entering a Code

1.  Turn the device and receiver on.
2.  Find the brand name of the device listed in the code tables that start on page 29.
3.  Press and hold the correct Mode button until all Mode buttons light up and release the Mode button. Mode button flashes.  
**For AUX Mode only.**  Press  
— 0 for second TV  
— 1 for a second DVD/VCR/BD  
— 2 for a tuner, amplifier, or audio receiver  
— 3 for a second satellite receiver
4.  Enter one of the three-digit device codes from the table found in step 2, using buttons on the number pad, such as device code 560. Press 1 after the device code if you want to program Limited Mode. See *Placing Remote in Limited Mode* on page 15 for more information.

11

### Programming Remote to Control Another Device

#### Entering a Code, continued

5.  Press POUND (#). The Mode button flashes three times.
6.  Press POWER to test if the code works for the device. If it does, the device turns off.
7.  Turn device on and try other buttons to make sure the device responds the way you expect. If you want to try another code, begin from step 1 again.
8.  If you are unable to find a code that works or if all the keys are not supported, go to *Learning From Another Device's Remote* on page 24 to program the key to the DISH remote.

If you are unable to find a code that works, try the instructions for *Scanning the Remote Database* on page 13.

12